

Ovation

INSTRUCTION MANUAL



2-Slice Toaster

Model OV303

IMPORTANT SAFETY REMINDERS

- This appliance should be for domestic use only, as described in this users' guide. Please ensure that this manual is fully understood before using the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- To ensure the continued safe and efficient operation of this appliance, we recommend that any servicing or repairs are only carried out by an authorised service agent.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not leave the appliance unattended while in use.
- Do not use outdoors.
- To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.
- Do not leave the appliance unsupervised in the course of its operation.
- Do not insert metal objects or other utensils into the toaster as this might cause an electric shock or cause a fire.
- Do not place any object over the bread slots when the toaster is in operation.
- Do not attempt to dislodge bread while the toaster is in operation.
- Do not operate the appliance with a damaged cord or plug or after the appliance has been damaged in any manner.
- Make sure that you position your toaster in an area far from curtains or any combustible material. This is to safeguard against fire.

- Do not let the cord hang over the edge of a table or counter or touch hot surfaces. Allow unit to cool before wrapping cord around base for storage.
- Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
- Do not place this appliance on or near a hot gas or electric burner, in or where it could touch a heated oven, or a microwave oven.
- Do not use the toaster without the slide out crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
- Do not use this appliance with bread containing sugar, jam or the like.
- Before connecting the plug to the main outlet, make sure the toasting lever is in the 'UP' position.
- Unplug from outlet when not in use or before cleaning.
- Do not try to repair the appliance on your own. Always contact an authorized technician. Always have a faulty cable replaced by the manufacturer.
- To disconnect, remove the plug from the outlet. Do not pull plug out by the cord.
- Do not plug in the power cord with wet hands.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Appliance is for indoor use only.
- This appliance is intended for domestic use only. The manufacturer cannot accept any liability for possible damage caused by improper or incorrect use.
- Damage caused by noncompliance with these instructions or any other improper use or mishandling will forfeit the appliance's warranty.

Note: Do not touch the toaster during use as the top of the appliance becomes hot. Keep well out of reach of children.

PARTS

1. Stainless steel finish
2. High-lift lever
3. Variable browning control knob
4. Cancel button
5. Bagel button
6. Defrost button
7. Reheat button
8. Slide-out crumb tray



USING YOUR TOASTER

- Before operating the machine, check that the mains voltage corresponds with the rating of the appliance.
- After making sure that the machine is plugged in, insert bread in the bread slots.
- Choose how you want your bread toasted by turning the variable browning control knob to the number (1 as lightest, 7 as darkest) you prefer.
- Press down the bread lever to start toasting.
- Press the function button you need (If no button is pressed, the default Toast function will start).

Function buttons:

CANCEL: If you need to stop toasting during a cycle, press the cancel button and the bread will pop up immediately.

BAGEL: This function extends toasting time and is useful for denser bread products such as bagels, english muffins and wholemeal bread. Adjust the toast level control knob to your preference. Press down and latch the

switch lever and immediately press the bagel button (LED indicator will light up).

DEFROST: This function defrosts and toasts frozen sliced bread in one operation. Adjust the toast level control knob to your preference. Press down and latch the switch lever and immediately press the defrost button (LED indicator will light up).

REHEAT: Use this function to warm up toasted or cooled bread. Press down and latch the switch lever and immediately press the reheat button (LED indicator will light up).

Note: The function buttons will be automatically locked about 10 seconds after switch lever is pressed down. To reset function buttons, press cancel.

- Wait for the bread to toast. Do not leave the toaster unattended.
- Your bread will pop up after a certain time. Once it's done, take your bread. Enjoy.

HOW TO CLEAN YOUR TOASTER

- It is important to first unplug the cord from the socket before trying to clean your appliance.
- Clean the toaster after each use. This prevents leftover crumbs from becoming encrusted in the appliance. Let the toaster cool down after use.
- Take out the crumb tray and remove any crumbs or pieces of bread. Clean with soapy water and rinse.
- Clean the exterior with a damp cloth.
- The base and exterior of the machine must not be wet.

Caution! Do not use any wire brush or other abrasive objects. Do not use any acidic or abrasive detergents.