

Ovation

INSTRUCTION MANUAL




Toaster Oven
Model OV09

IMPORTANT SAFETY REMINDERS

- This appliance should be for domestic use only, as described in this users' guide. Please ensure that this manual is fully understood before using the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- The oven's body becomes very hot during operation. Be careful not to burn yourself during use. Use the door handle to open and close the oven door.
- To avoid electric shock, do not immerse cord, plug or any parts of the oven in water, always unplug after use.
- Do not put the oven close to a gas burner or other source of high temperature or direct to an electric fan which may affect proper temperature control.
- The temperature of the door may become very high. Keep away when in use.
- Use a tray handle or oven mitts to insert or remove the tray from the oven.
- Do not put cardboard, plastic, paper, candle, flammable materials and the like in or on the top of the unit.
- Use extreme caution when removing tray or disposing hot oil from the tray.
- Do not place anything heavy on the oven door.
- Do not splash water onto the glass during or immediately after use as it may cause the glass to break.
- The oven needs at least 10 cm clearance space on all sides and at least 30 cm above. This is to allow adequate air circulation.
- Unplug the appliance after using it or before cleaning. Always switch off the appliance before unplugging it. Allow the appliance to cool down completely before placing or removing the accessories.

- To reduce the potential risk of electrical shock, this appliance is equipped with an earthing plug and should be connected to a grounded socket.
- To ensure the continued safe and efficient operation of this appliance, we recommend that any servicing or repairs be carried out by an authorised service agent.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not leave the appliance unattended while in use.
- Do not use outdoors. The oven is for indoor use only.
- To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.
- Do not operate the appliance with a damaged cord or plug or after the appliance has been damaged in any manner.
- Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
- Do not plug in the power cord with wet hands.
- To disconnect, remove the plug from the outlet. Do not pull plug out by the cord.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use only. The manufacturer cannot accept any liability for possible damage caused by improper or incorrect use.
- Damage caused by noncompliance with these instructions or any other improper use or mishandling will forfeit the appliance's warranty.

PARTS

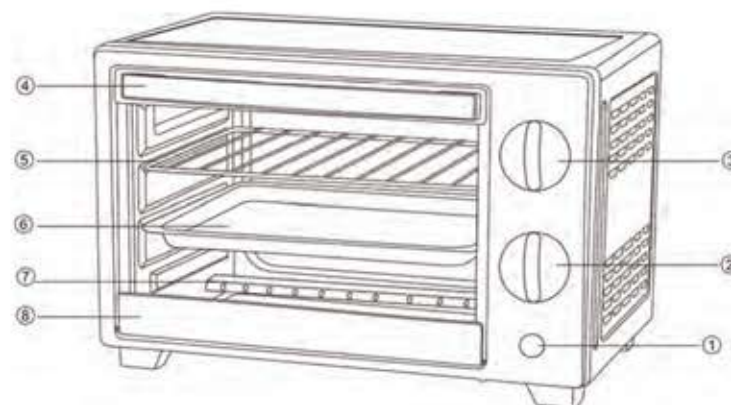

- | | | |
|---------------------|----------------------|---------------------|
| 1. Indicator light | 4. Glass door handle | 7. Heating elements |
| 2. Timer dial | 5. Wire rack | 8. Glass clip |
| 3. Temperature dial | 6. All-purpose pan | |

USING YOUR OVEN

Before operating the machine

- > Wash all the oven accessories with mild dish detergent. Rinse with clean water and dry thoroughly. Reassemble in the oven.
- > Check that the mains voltage corresponds with the rating of the appliance.
- > Heat up the oven at MAX temperature for approximately 30 minutes to eliminate packing odor that may remain after shipping.

How to bake

- > Place the wire rack or all-purpose pan at desired level.
- > Place the food to be baked on the wire rack or all-purpose pan. Close the oven door.
- > Turn the Timer Dial to desired cooking time. (to use the timer, turn the timer dial all the way and dial back to the desired time.)
- > Turn the Temperature Dial to the desired temperature.
- > When finished baking, turn the Timer Dial to "0" to switch off the oven.

Helpful tip: You may have better results if you preheat the oven before cooking some delicate dishes, meats or cakes but in general, it is not necessary to preheat the oven.

How to broil

- > Place the wire rack or all-purpose pan at desired level.
- > Place the food to be broiled on the wire rack or all-purpose pan. Close the oven door.
- > Turn the Temperature Dial to the desired temperature.
- > Turn the Timer Dial to the desired cooking time.
- > When finished broiling, turn the Timer Dial to "0" to switch off the oven.

Note: Keep a distance of at least 2 cm between food items and the top element.

HOW TO CLEAN YOUR OVEN

- It is important that you clean the entire appliance after each use to prevent an accumulation of grease and to avoid unpleasant odours.
- Allow the appliance to cool. Unplug from outlet before cleaning.
- Do not immerse appliance in water or wash it under running water
- The grill and all-purpose tray can be washed as normal kitchenware using a wash cloth or a damp sponge. Dry before storing.
- Use a damp sponge to clean the interior of oven. Wipe dry afterwards.
- Do not use abrasive cleaners or sharp utensils to clean the oven as it will scratch the oven body.
- Let all parts and surface dry thoroughly prior to starting or operating the oven again.

Caution! Do not use any wire brush or other abrasive objects. Do not use any acidic or abrasive detergents.