


# AIRFLO<sup>®</sup>

## Instruction Manual

Bagless Stick Vac

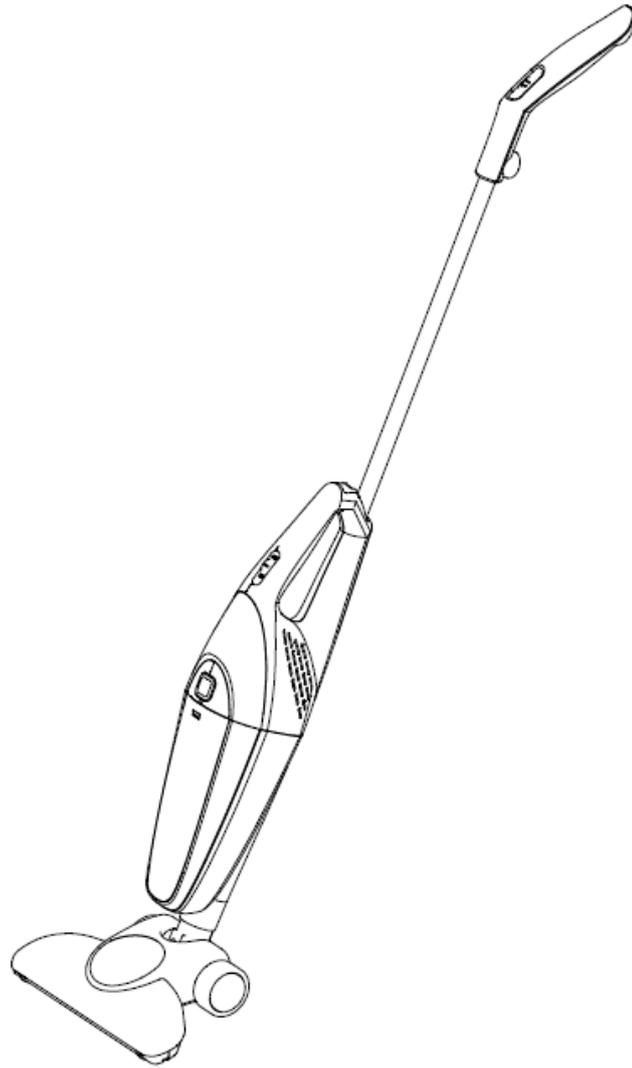

**Model AFV757**

# IMPORTANT SAFETY INSTRUCTIONS

**Read all instructions before using your vacuum cleaner**


**WARNING:** *To reduce the risk of fire, electrical shock, or injury:*

1. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only the manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. If appliance is not working properly or it has been dropped, damaged, left outdoors, or dropped in water, return it to an authorized service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
10. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
11. Turn off the control before unplugging.
12. Use extra care when cleaning on stairs.
13. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
14. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
15. Do not use without dust bag and/or filters in place.
16. Look on your vacuum and follow all label and marking instructions.
17. Keep end of hose, wands and other openings away from your face and body.
18. Always unplug this appliance before connecting or disconnecting vacuum hose.
19. Store the vacuum indoors. Put the vacuum away after use to prevent tripping accidents.
20. Using improper voltage may result in damage to the motor and possible injury to the user. Correct voltage is listed on the rating label.
21. Use only on dry, indoor surfaces.
22. Do not use for any purpose other than described in this user's guide.
23. If the appliance is damaged, it must be repaired by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
24. Do not run appliance over cord. Keep cord away from heated surfaces.

25. This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure they do not play with the appliance.

### DESCRIPTION OF PRODUCT

1. Handle (with on/off switch)
2. Metal Tube
3. On / Off Switch
4. Dust Cup Release Button
5. Body
6. Dust cup
7. Floor Brush
8. 2-in-1 brush

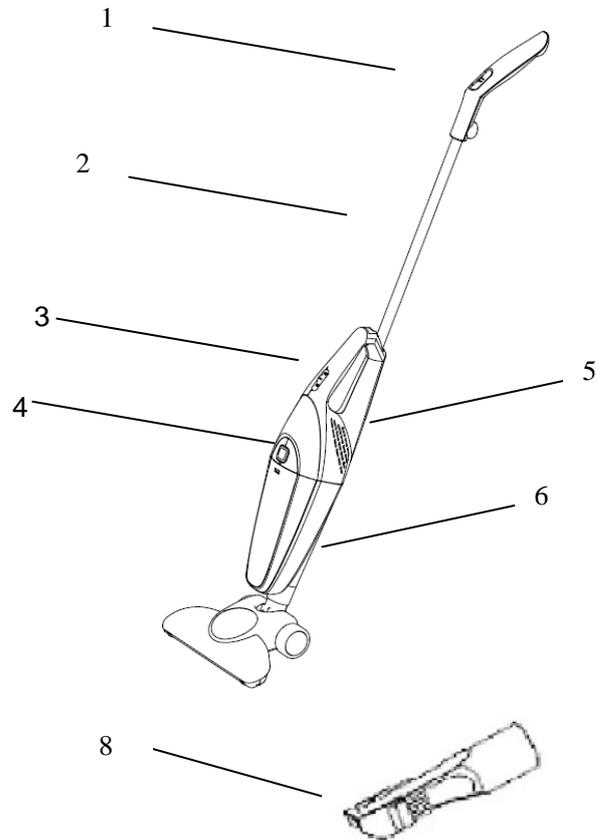


### SAFETY ADVICE AND WARNING

1. This appliance is for domestic use.
2. Use the appliance only on the voltage specified on its rating plate.
3. Do not vacuum the following things:
  - \* Water and other liquid
  - \* Lighted matches, cigarette ends or hot ash.
  - \* Sharp objects.
4. Keep the appliance far away from heat sources.
5. Check the hose regularly. If it is damaged in any way, replace it immediately.
6. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

## INSTRUCTION FOR USE

### A. Assembling for hand-held function


1. Insert the 2-in-1 brush into the dust cup

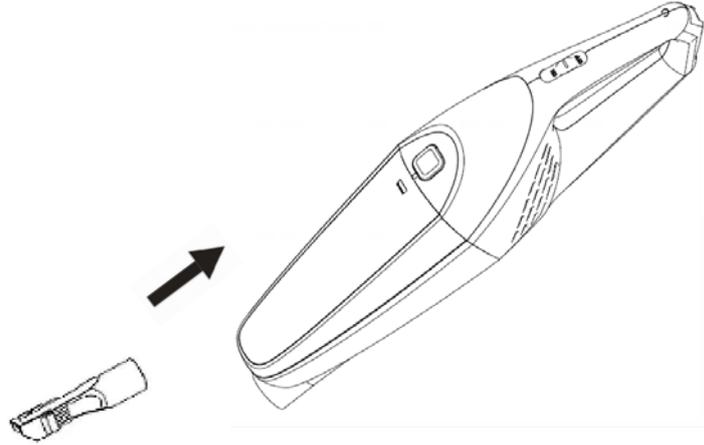


2. Hold the body with your hand

## B. Assembling for floor cleaning

1. Insert floor brush into the dust cup

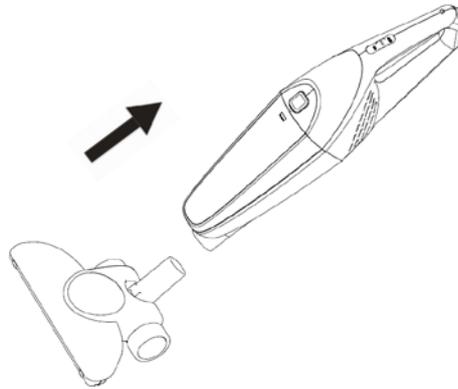


2. Insert stick into body

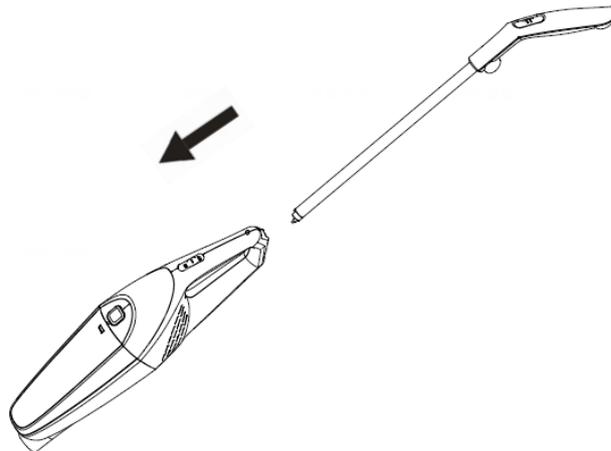

## C. Operation

Slide the power switch to "On", the cleaner begins working.

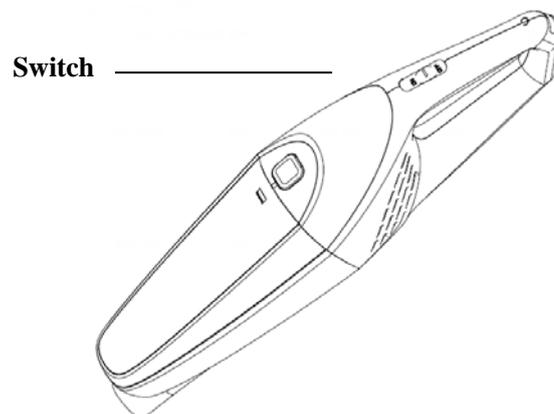

## D. Using the Accessories

a) Floor brush:

The floor brush has two positions: One, for hard/even surfaces; and Two, for soft/fabric surfaces.


b) 2-in-1 brush (Crevice / Brush nozzle)

For cleaning radiators, corners, edges, drawers, etc.


## MAINTENANCE

1. Empty and clean the dust cup

- \* Always operate the vacuum cleaner with dust cup installed.
- \* Disconnect from electrical outlet before emptying dust.
- \* When the dust cup is full, empty it immediately. Press dust cup release button then tilt dust cup down and away from unit.

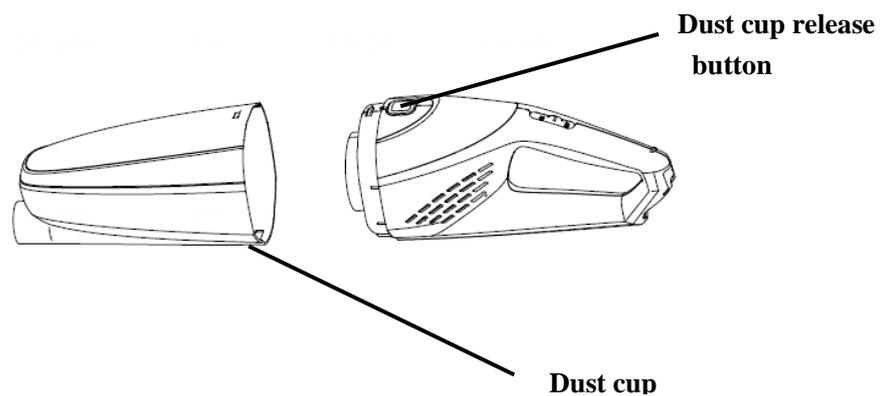


2. Grasp filter from the center. Pull filter out of dust cup then empty the tank into waste basket.

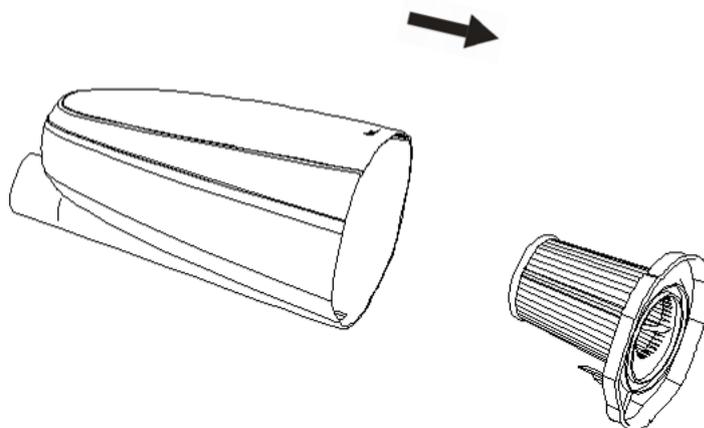

### 3. Cleaning the filter

- \* Filter should be cleaned when it becomes visibly dirty or blocked.
- \* To clean filter, simply brush the dirt off.
- \* Note: Always operate the cleaner with filter installed. Otherwise, this may reduce suction or damage the motor.
- \* Disconnect from electrical outlet before cleaning filter.

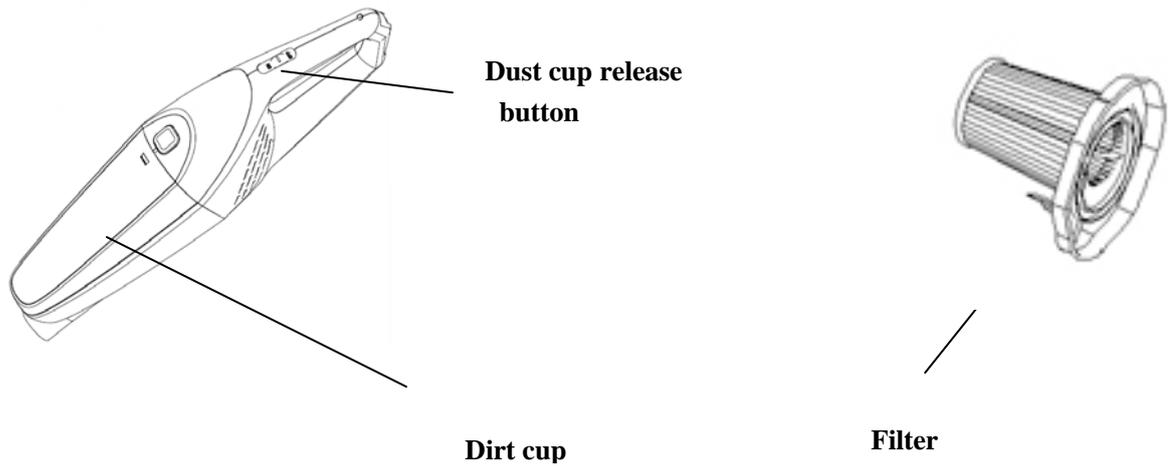

## TROUBLESHOOTING

Problem	Possible cause	Remedy
Weak suction	Dust in the filter	Clean the dust in the filter
	Dust cup full	Replace the dust cup or throw off dust
	Obstacles in the tube	Remove all obstacles
Motor not working	The plug is not connected to the wall socket	Insert the plug into the power socket