

Ovation

INSTRUCTION MANUAL



Kettle
model OV880

KNOW YOUR KETTLE



IMPORTANT SAFETY REMINDERS

- This appliance should be for domestic use only, as described in this users' guide. Please ensure that this manual is fully understood before using the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.

- Read these instructions carefully before using kettle.
- Make sure appliance operating voltage meets power supply line voltage at your house.
- In order to avoid risk of fire, do not use adapters for connecting the appliance to wall outlet.
- Do not switch the kettle on without water.
- Use the kettle only for boiling water, it is forbidden to heat or boil any other liquids.
- Water level should always be above the minimum mark and below the maximum mark.
- Install kettle on level and firm surface.
- Do not use this appliance near heat sources and open flame.
- Use only the base included in the delivery set.
- You can adjust length of power cord by winding it around the base.
- Do not allow power cord hanging over table edge. The cord should not touch any heated surfaces.
- Do not open the lid during water heating.
- Be careful during water heating in order to avoid hot steam burns.
- Do not touch hot surfaces of the kettle, hold it only by the handle.
- Be careful while carrying the kettle full of boiled water.
- It is forbidden to detach operating kettle from the base. In case of such necessity, switch off the kettle first by pressing the ON/OFF button and only then take the kettle from the base.

- In order to avoid electric shock, do not immerse this appliance into water or any other liquids.
- Disconnect the appliance from wall outlet when not in use and before cleaning.
- Do not put the kettle in the dishwasher.
- Before putting away the appliance for long storage, disconnect it from wall outlet and let it cool down.
- Examine power cord and plug periodically. Do not use the kettle in case of any housing or power cord damages.
- Do not repair the appliance on your own. In case of malfunction, call an authorised service center for repair.
- Electric kettle is intended for household purposes only.
- Store the appliance at places inaccessible to children.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Avoid spillage on the connector.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Heating element surface is subject to residual heat after use.
- Use the kettle according to this instruction, any misuse may cause electric shock or other hazards.
- Damage caused by noncompliance with these instructions or any other improper use or mishandling will forfeit the appliance's warranty.

Before using for the first time...

- Unpack the kettle.
- Make sure operating voltage of the kettle meets supply line voltage.
- Insert power cord plug into wall outlet.
- Open kettle lid.
- Fill kettle with water up to (but not beyond) the maximum mark. Close the lid and place kettle on the base.
- Switch on the kettle by pressing the ON / OFF button. When water is boiled, the kettle will switch off automatically. Pour water out. This will eliminate any residue from packaging. Repeat the process if needed.

HOW TO USE

- Connect appliance to wall outlet.
- Before filling kettle with water: detach kettle from its base, open the lid, pour in some water, close the lid. Place kettle on the base.
- Press ON / OFF button. Kettle will start heating.
- When water is boiled, the kettle switches off automatically.
- In boiling mode, you can switch off the kettle by pressing the ON / OFF button again.
- Make sure the kettle is switched off before detaching it from the base.
- Note: Wait 15-30 seconds after switching off the kettle to switch it on again to boil water.

CLEANING AND MAINTENANCE

- Disconnect the appliance from the wall outlet before cleaning. Pour water out and let the kettle cool down.
- Wipe outer surface of the kettle with a damp cloth. Use soft cleansers to remove dirt. Do not use metal brushes or abrasive cleansers.
- Do not immerse kettle and base into water or any other liquids.
- Do not put kettle in the dishwasher.

To remove scale:

- Scale collected on the inner surface of the kettle affects the taste of water, and also negatively affects the heat exchange between water and heating spiral causing spiral overheating and damage.
- In order to remove scale:
 - 1) Fill your kettle up to maximum level with water mixed with vinegar in 2:1 proportion.
 - 2) Boil the liquid and leave it for a whole night.
 - 3) In the morning, pour the liquid out.
 - 4) Fill the kettle with clean water up to the maximum level.
 - 5) Boil water and pour it out again.
- You can use special scale removing agents intended for electric kettles.