


---

# AIRFLO<sup>®</sup>

## INSTRUCTION MANUAL

### Select Steam

Model AFS106

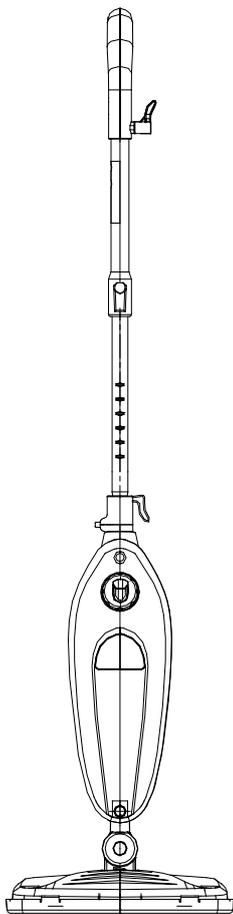

---

*THANK you and congratulations for choosing Select Steam. This Steam mop achieves a high degree of cleansing power by converting water into steam and by using a microfiber floor cloth to absorb dirt. When contact is made with floor surfaces, dirt and grime can be eliminated in a matter of seconds. Since the Steam mop uses the active power of steam without the use of detergents or soap, it is environmentally friendly.*

*When used correctly, Select Steam can kill dust mites and bacteria. To disinfect a specific area, position the steamer over a targeted area for a minimum of 18 seconds. Use this procedure to disinfect floors in bathrooms, showers, around kitchen counters, pet sleeping quarters, etc.*

## IMPORTANT SAFEGUARDS


### PLEASE READ CAREFULLY

When using an electric appliance, basic precautions should always be followed, including the following:


1. Check that the main voltage corresponds to the voltage indicated on the rating label (220-240V, 50Hz, 1500W, Class I).
2. Do not use outdoors.
3. Do not leave the Steam mop unattended while switched on. Turn off the switch and unplug the electrical cord when not in use and before servicing.
4. Do not allow to be used as a toy. Close attention is necessary when used near children, pets or plants.
5. The appliance is not intended for use by young children or infirm persons without supervision
6. Never direct steam towards people, animals or plants, or equipment containing components.
7. Do not immerse the Steam mop into water or other liquids. Do not use with damaged cord or plug.
8. Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
9. Never force the plug into an outlet
10. Do not use extension cords or outlets with inadequate current carrying capacity.
11. Do not use wet hand to touch the power cord and plug
12. After use, please promptly pull out the power cord plug
13. Do not insert any objects into openings. Do not use with any opening blocked.
14. Do not handle plug or Steam mop with wet hands or operate without shoes.
15. Do not use without floor cloth in place. Do not use without water in the water tank.
16. When using on stairs use extra caution.
17. Do not use the steam mop in a closed room.
18. Keep your work area well lighted.
19. Never block the steam openings of the product or place it on a soft surface where the steam openings may be blocked. Keep the steam openings free of lint, hair, and the like.
20. Use only as described in this manual. Use only manufacturer's recommended accessories.
21. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been give supervision or instruction concerning use of the appliance by a person responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.

## Products Features:



1. 180° swivel head to get into tight spaces and under furniture

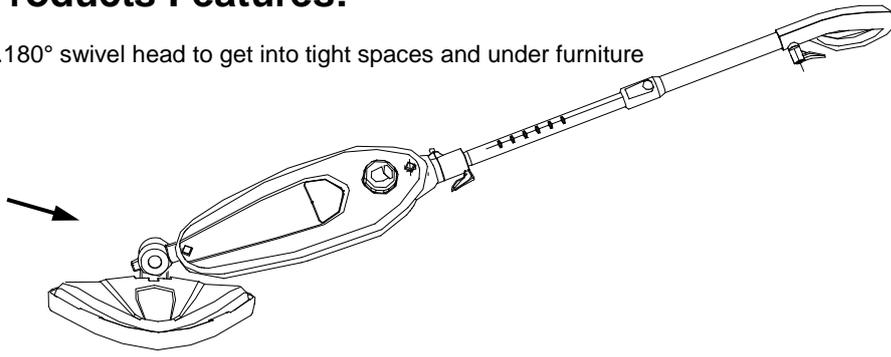


2. Assembly and disassembly:

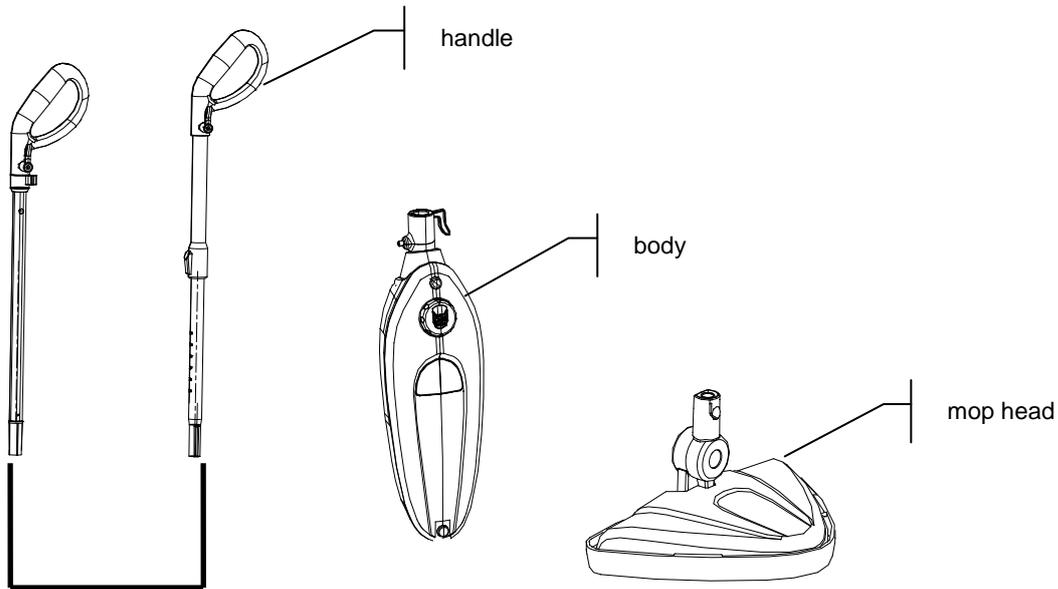

3. Guide to the water tank color change:

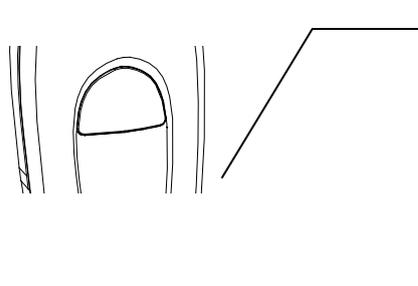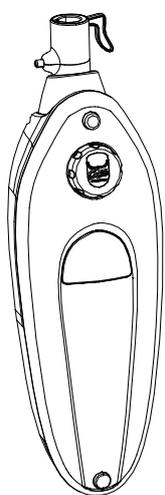

Preheat and no water  
displays a red

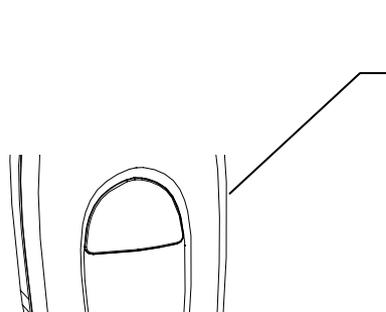


Preheat finish and normal work  
displays blue

Lights flash and the pump  
automatically stops working when  
the tank has a low water level.


4. Smart Select (four kinds of ground type for your choice)

Simply select your floor type on the Smart Select dial and the mop automatically releases the right amount of steam.

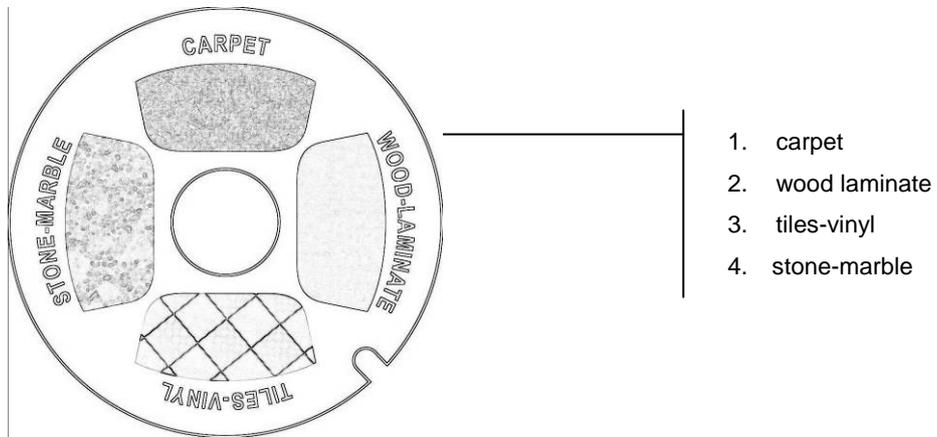

5. Always wear suitable shoes when changing the microfiber cloth on your steam mop and sweeper. Do not wear slippers or open-toed footwear.





Place the front of your shoe onto the microfiber cloth removal tab and press down firmly.

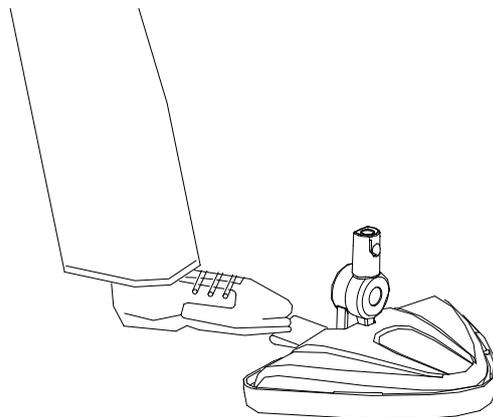

6. Steam output: 25-30g/minute.

## Product Components:

  - A: Handle
- B: Cord holder
- C: Telescopic iron pipe
- D: Main power switch
- E: Handle button
- F: Switch knob
- G: Water tank
- H: Body
- I: Swivel Joint
- J: Carpet glider
- K: Power cord and plug
- L: Water tank plug
- M: Mop head
- N: Microfiber pad
- O: Measurement cup

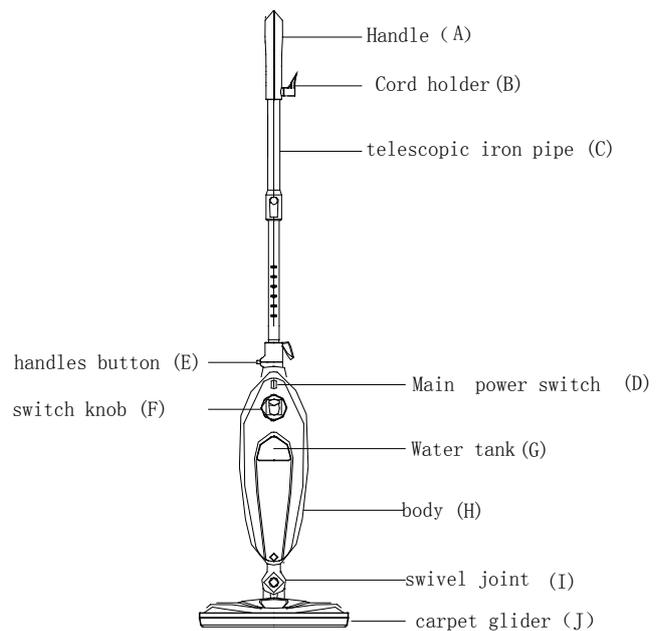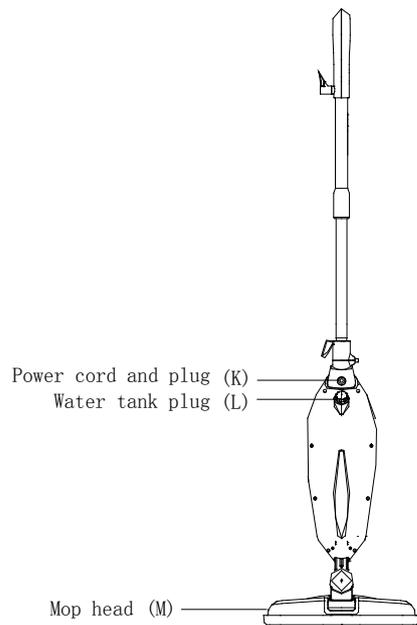

## INSTRUCTIONS FOR USE


The Steam mop is designed to thoroughly clean floor surfaces, such as marble, ceramic, stone, linoleum, sealed hardwood floors and parquet.

**WARNING:** On surfaces that have been treated with wax, the wax may be removed by the heat and steam action. Do not use on unsealed wood floors or let unit stand on any wood floor for an extended period of time. This could cause the wood grain to rise. When using on vinyl, linoleum or any other heat sensitive floors, use extra caution. Too much heat can melt down glue in the flooring. It is therefore recommended that a sample cleansing be carried out on an isolated area of the floor. It is also recommended that you check the use and care instructions of the surface from the floor manufacturer to ensure suitability to steam cleaning.

**Steam mop uses tap water.** Residents in areas with hard water, should use distilled water for better performance.

## HOW TO ASSEMBLE AND USE


- 1) Attach mop head ( M ) to body ( H )

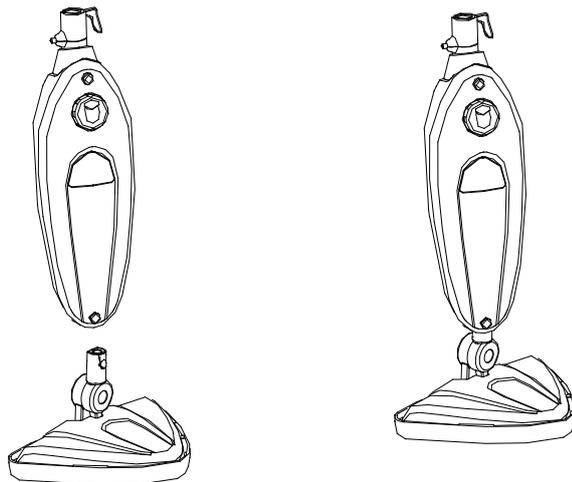


- 2) Insert handle ( C ) down into the body ( H )



3) Attach handle to body.

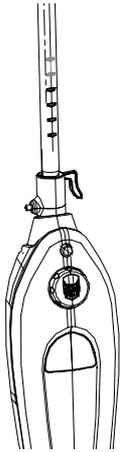


4) Stick on microfiber cloth (N) in the mop head below (M)

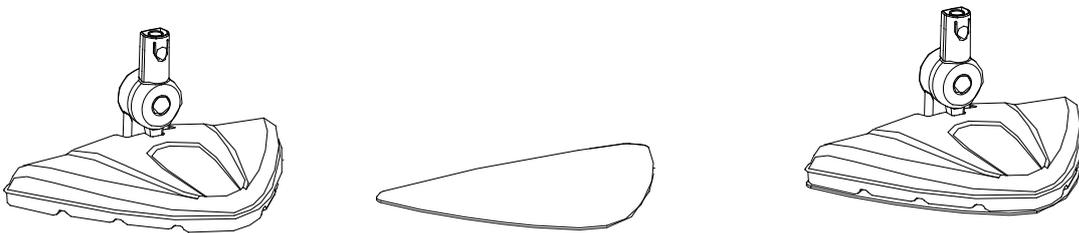


**Note:** Microfiber Cloth (N) is washable intended for one-time use

5) Stick on cleaning cloths (N) when using Steam mop on carpets. Place the mop head (with microfiber cloth in place) over the Carpet Glider ( J).

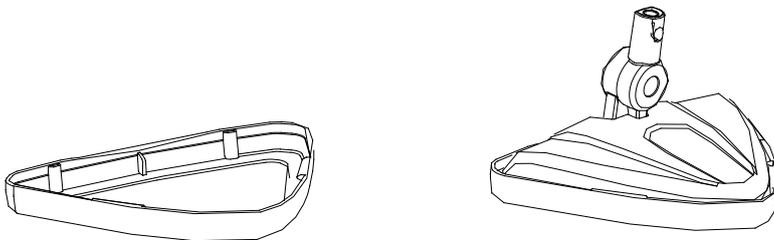

**NOTE:** Do not operate without Microfiber Cloth Pad

6) Please fill water into water tank with measuring cup ( O ) (The MAX is 700ml / 28oz; do not overfill)

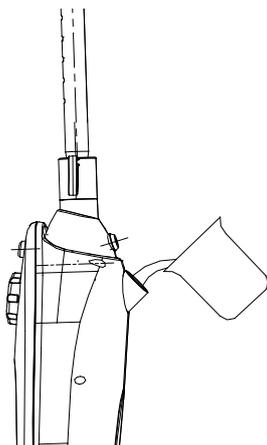

- 
- 7) Twist the Quick Release Cord Wrap clockwise to unwrap the Power Cord completely and plug into a grounded outlet .
  - 8) When plugged in, water tank window becomes red. After 25 seconds, window changes to blue. Blue means the Mop is ready to emit steam.
  - 9) Slowly pass over surface to be cleaned. It is recommended to sweep or vacuum floor prior using the Steam mop.

**NOTE:** It is recommended that another high wattage appliance is not operated on the same circuit to avoid a circuit overload.

**CAUTION:** To sanitize an area of your floor, leave the Steam mop over area for a minimum of 8 seconds, but no longer than 15 seconds. Leaving the Steam mop in a stationary position for a longer period than recommended may cause the build up of a pale residue. This residue can be removed by using a decalcifying product or with a few drops of vinegar. (See troubleshooting guide)

**WARNING: NEVER run the Steam mop without water, NEVER direct steam at any person or animal.** Use the Steam mop on sealed hard floor only.

When you finish cleaning, unplug Power Cord from outlet, empty the Water tank, carefully remove the Cloth pad from the head, wind Power Cord around the Cord Wrap and store it upright in a dry area. Note that the cloth pad may be very hot.

## **CLEANING AND MAINTENANCE**

Prior to cleaning or maintenance, isolate unit by removing cord from the power socket. Do not immerse the unit in water.

- 1) Microfiber Cloth pad can be machine washed in hot water and tumbled dry.
- 2) Wipe the steamer with a soft cloth.

The Steam mop should only be used with its own specially developed floor cloths and Filter (spare Cloth pads and Filters are available from your retailer).

# TROUBLESHOOTING GUIDE

Problem	Solution
LED Indicator is not on.	Ensure the Steam mop power cord is correctly plugged in. Ensure circuit breaker is operational. Try operating the Steam mop from another power outlet.
The Steam mop will not release steam.	Ensure the water tank is filled with water and placed properly.
Pale residue left on the floor.	Caused by leaving the Steam mop in the same position for a long time. This can be removed with household white vinegar or a decalcifying product. Alternatively reheat the area for one minute and residue should be removed.