

# Ovation

## INSTRUCTION MANUAL



**Kettle**  
Model OV765

## IMPORTANT SAFETY REMINDERS

- This appliance should be for domestic use only, as described in this users' guide. Please ensure that this manual is fully understood before using the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- To ensure the continued safe and efficient operation of this appliance, we recommend that any servicing or repairs are only carried out by an authorised service agent.
- Ensure the unit is plugged into an electrical outlet with the correct voltage.
- If the appliance or the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person, in order to avoid any hazard.
- Always place the appliance on a flat, level surface.
- Allow to cool down before cleaning or storage. The mains cable must not come into contact with any hot parts of the appliance.
- Do not immerse the appliance in water or any other liquid. Do not overfill and go beyond the MAX marking (or below the minimum) as boiling water may spray out which could scald or burn.
- Never operate appliance with open lid.
- Do not use or place the appliance on a hot surface or near source of heat.
- Only use the kettle for heating water.
- The kettle can only be used with the stand provided. Only original parts should be used.

- Do not leave the appliance unsupervised in the course of its operation.
- If water gets into any electrical elements inside the kettle or its base, carefully dry the parts before plugging in the kettle to the mains.
- Do not operate the kettle when empty.
- Do not plug in the power cord with wet hands.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Appliance is for indoor use only.
- This appliance is intended for domestic use only. The manufacturer cannot accept any liability for possible damage caused by improper or incorrect use.

## PARTS

1. Spout

2. Base

3. Water level indicator

4. Lid

5. Lid release button

6. Handle

7. On / Off Switch



## USING YOUR KETTLE

- Before first use, fill the kettle with water to the MAX level, boil it, and then empty and rinse with fresh water. Repeat a couple of times to remove production dust, etc.
- Wipe the outside of the kettle with a damp cloth.
- Press the Lid Release Button to open the lid and pour water into the kettle. (It is also possible to fill the kettle through the spout, without opening the lid.)
- Close the lid and place the kettle on the base.
- Switch the kettle on.
- The kettle will switch off automatically after water boils. However, it may be switched off at any time by moving the ON / OFF switch to the off position.

**CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.**

**WARNING: Do not remove the lid while water is boiling.**

- Never open the lid in the course of the boiling process. Make sure the lid is firmly closed when pouring out water.

## CLEANING TIPS

- Always unplug power base cord before cleaning and allow the kettle to cool down first.
- The exterior of the machine should be cleaned, if necessary, with a slightly damp cloth without additives.
- Never immerse the appliance in water. Never put the appliance in a dishwasher.
- Make sure that the electrical connections do not become damp.

**CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning. Use a soft cloth and a mild detergent.**

**Caution! Do not use any wire brush or other abrasive objects. Do not use any acidic or abrasive detergents.**

## **ADDITIONAL REMINDERS**

- Keep your appliance away from sources of heat, direct sunlight, humidity or sharp edges.
- Use only cold or tap water when filling.
- The kettle is only to be used with the base provided.
- The base and exterior of the machine must not be wet.
- Do not try to repair the appliance on your own. Always contact an authorized technician. Always have a faulty cable replaced by the manufacturer.