

Airflo

INSTRUCTION MANUAL




Rechargeable Window Cleaner
Model no. OV1801

IMPORTANT SAFETY REMINDERS

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- DO NOT leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance should not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- DO NOT use this product for anything other than its intended use.
- This appliance is for household use only.
- DO NOT carry the appliance by the power cord.
- DO NOT insert objects into the air outlets.
- DO NOT spray liquid from the spray bottle directly onto equipment containing electrical components, such as the interior of ovens.
- DO NOT place in front of or close to radiators, heaters or fires.
- Always test by wiping high shine surfaces using the microfibre cloth on a small area, prior to using the appliance on the surface.
- This appliance is intended for wet pick up only. DO NOT use for picking up dust or other dry materials.
- DO NOT use to pick up hot ash, flammable liquids, or any other hot, smoking or burning objects or glowing embers.
- DO NOT use to pick up hard, sharp objects such as glass or nails.
- DO NOT use any accessories or parts that are not supplied with the appliance.
- In the unlikely event the appliance develops a fault, stop using it immediately.
- This appliance must only be supplied at safety Extra Low Voltage corresponding to the markings on the rating plate.
- Only use this appliance with the adapter that is supplied with the appliance.
- Never leave on charge when unattended.
- Never leave on charge over night.
- Adults only to charge this appliance.

PARTS

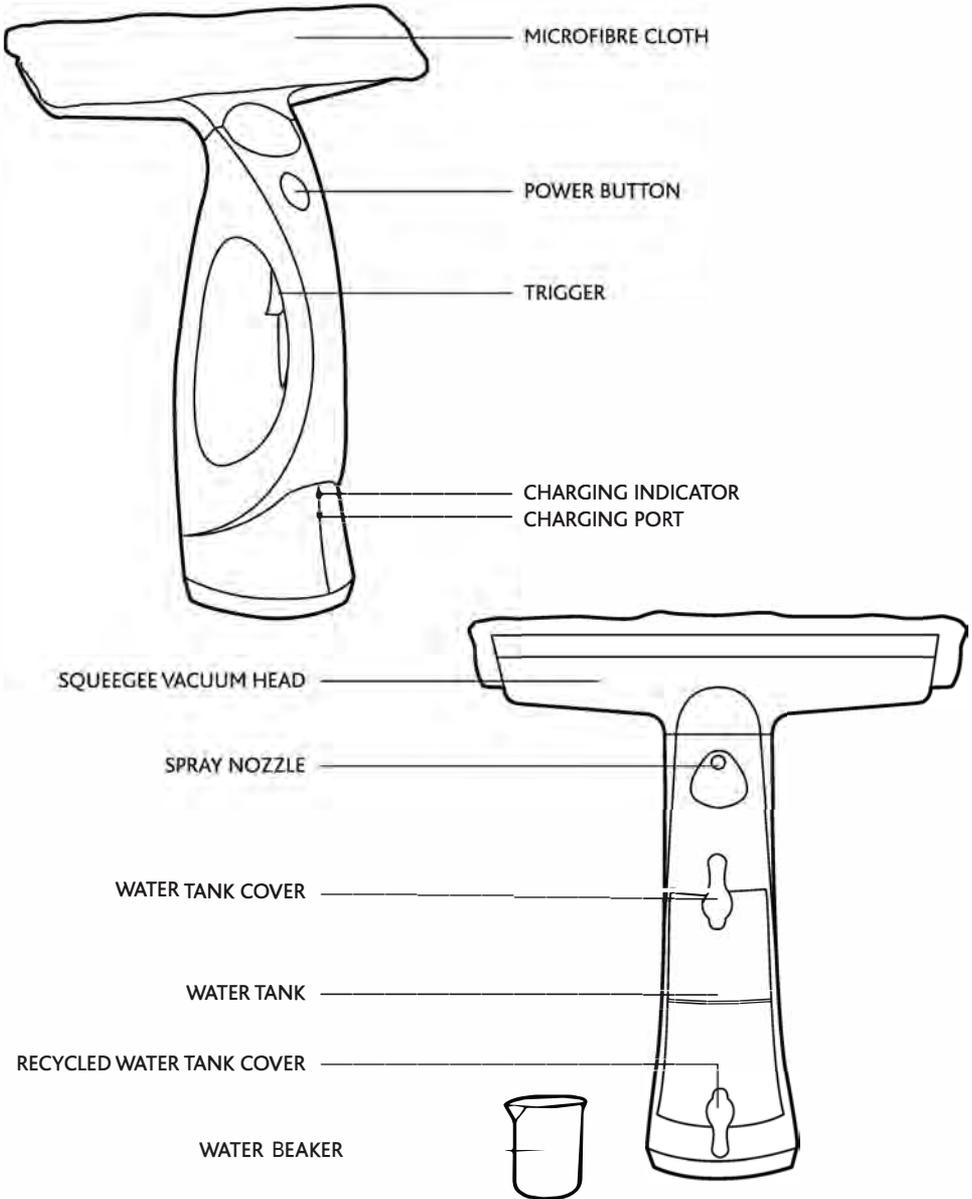

OPERATION

USING THE WINDOW CLEANER FOR THE FIRST TIME

1. Carefully remove all contents from packaging and inspect product to make sure there is no damage.
2. Assemble the appliance as per the instructions.
3. Charge for 4 hours.
4. Your appliance is now ready to use.

CHARGING

Before first use, charge for 4 hours.

The window cleaner needs to be charged for 4 hours for 30 minutes of continuous use.

To charge:

1. Connect the lead from the charging adaptor to the charging port on the window cleaner.
2. Plug the adaptor into a mains power supply. The indicator light will illuminate red to show the battery is charging. When the window cleaner is fully charged the indicator light will illuminate green.
3. Switch off at the mains and remove the charger from the window cleaner.

Note: If the indicator light is flashing, the window cleaner is not charging. Press the power button to reset the window cleaner.

ASSEMBLY

1. Align the squeegee vacuum head and the main body and click into place.
2. To attach the microfibre cloth, attach the Velcro that is on the squeegee vacuum head.

USING YOUR APPLIANCE

1. Wipe the leading edge of the squeegee to avoid any streaks.
2. Using the water beaker, fill the water tank by removing the water tank cover. Take care not to over fill. You can add a small amount of window cleaning solution.
3. Use the trigger to spray the window and then wipe any excess dirt away with the microfibre cloth.
4. Turn the window cleaner on by pressing the power button.
5. Using a vertical motion, use the window cleaner from the top to the bottom of the window, until the window is clear.
6. Hold the window cleaner at the bottom of the window to suck up any excess dirty water.
7. Turn the window cleaner off when the dirty water inside fills the tank.
8. Open the recycled water tank cover and pour away the dirty water.

Note: Always unplug the window cleaner from the charger before assembly, cleaning, maintenance or use.

TROUBLESHOOTING

Questions	Answers
No spray.	Fill the water tank with water. Spray system is blocked. Try using warm water in the tank and spray gently to unblock.
Water is leaking from the tank.	The water tank has been overfilled or the recycled water tank is full. Check the rubber seal of the filter unit.
No suction.	The window cleaner doesn't have enough charge.

CLEANING & CARE

- Do not immerse the main body in water.
- Always unplug the window vac from the charger before cleaning or maintenance.
- Wash the microfibre cloth in warm soapy water and allow to air dry thoroughly.
- To clean the exterior of the window vac, wipe it with a soft, damp cloth and then allow to dry thoroughly.
- Clean the squeegee vacuum head and spray head in warm soapy water and allow to dry.