

Ovation

INSTRUCTION MANUAL




Chocolatera
Model no. OV43

IMPORTANT SAFETY REMINDERS

- * Never disassemble, repair or modify the product.
- * Do not touch the charge with wet hands otherwise it may cause damage or electric shock..
- * Do not immerse cord, plugs, or other electric parts in water or other liquids as it may cause electric shock and injury.
- * Do not use outdoors. This appliance is for household only.
- * Never lift lid when appliance is hot. Precaution should be exercised.
- * After running the motor continuously for one cycle, wait at least five minutes before next use..
- * This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance..
- * Always operate the appliance with the lid in place.
- * Do not touch hot surfaces.
- * When not in use or before cleaning, unplug the appliance from outlet.
- * Do not operate this appliance with a damaged cord or plug.
- * Do not wash any parts in the dishwasher.
- * Do not fill the mixing container past the MAX line.
- * Allow the entire appliance to cool before cleaning.
- * To ensure the continued safe and efficient operation of this appliance, we recommend that any servicing or repairs are only carried out by an authorised service agent.

PARTS

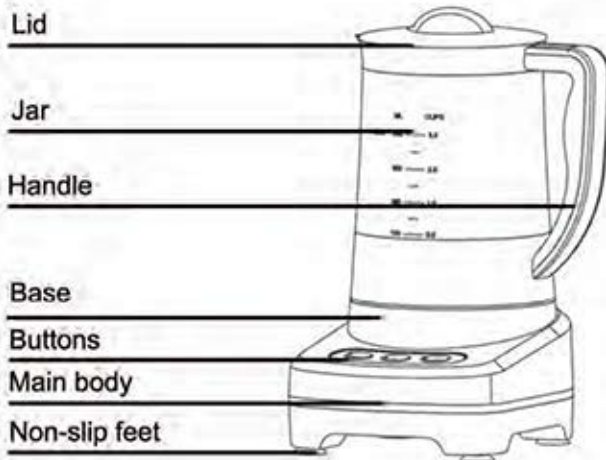

HOW TO USE YOUR CHOCOLATERA



MIX - This will mix your beverage -- without heat.. (Only the MIX and STOP buttons will illuminate.) Press once for high speed, twice for lower speed. Mix will operate for 10 minutes, then will automatically go on idle.

Note: Always put milk/liquid first before any solid item. Make sure the ingredients get thoroughly mixed. This will prevent any ingredient getting stuck to the bottom heating element.

HEAT - This will heat and mix your beverage. (All three buttons will illuminate). Press this button to heat and mix at low speed. To adjust it to a higher speed, press the MIX button. It will go on idle mode when the beverage reaches the perfect temperature and will automatically reheat and remix when your drink cools down.

Note: Always put milk/liquid first before any solid item. A tip: pour in the milk/liquid first and let it heat up. Once it's hot, add other solid ingredients. This will prevent any ingredient getting stuck to the bottom heating element.

STOP - Pressing this button will stop all functions. You can press this any time to completely switch off the appliance.

*** Twist the lid clockwise to open and lift and counter-clockwise to close it. When the jar is empty or has less than a cup of liquid remaining, press the STOP button.

Note: The appliance will remain ON until you press STOP

*** This appliance is designed to mix cocoa powder, coffee, tea and other hot drinks. You can also put some chocolate, sugar or cream into your beverage to make your favorite flavour.

Note: Do not put too much chocolate or sugar as it may stop mixing.

110-120V~50/60Hz 500W

Make hot chocolates, lattes, mochas, chai teas and other hot beverages.

This appliance combines electric heating and mixing function to create your favourite hot drink.

Temperature reaches 65 °C - 69 °C -- this will not destroy the nutrition of the milk or other beverages.